

# ALULA TRANSLATOR AND RANGE EXTENDER

Translate or Repeat security sensors and repeat blind & shade products


The Alula Translator and Range Extender provides both intelligent range extension, and translation of Insynctive Technology products to Honeywell®, Interlogix®, 2GIG®, and DSC® Systems. The translator is capable of both repeating shade products, and either translating or repeating security sensors simultaneously, reducing cost and simplifying installations.



## FEATURES

- Selectable wireless panel compatibility
- Translates or Repeats security sensors while simultaneously repeating blind & shade products
- Repeat blind & shade products by simply plugging it in
- Rechargeable backup battery
- Cover tamper
- Lockout to prevent takeovers

# TRANSLATOR QUICK SETUP

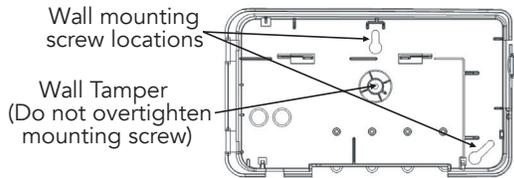

(Mounting hardware not included. Use two #4 or # 6 screws for mounting )

## 1) MOUNT AND WIRE

- A Select a mounting position and location.
- B Connect the power supply to the translator.

## 2) TRANSLATOR CONFIGURATION

- A Select the brand of panel that the translator must talk to using the "PANEL SELECT" knob.  
(Select slot 7 when used for range extension only)
- B Select slot 7 on "SENSOR SELECT"
- C Sensor configuration: The translator must learn the security sensors that are to be translated or repeated.
  - a) Press the "CONFIGURE" button to enter configuration mode.
  - b) Tamper or trip all sensors that are to be included in the system
  - c) Press the "CONFIGURE" button to exit configuration mode.

## 3) FINISH

- A With the translator cover open, perform a panel sensor test.
- B Close the cover. Test and verify proper operation of the sensors at the panel.
- C Cut the lock wire to lock the translator  
(For more information on locking, refer to Advanced Setup, step 4).
- D Secure cover with screw.

*\*For further installation instructions, see Advanced Setup in the product manual.*

## SPECIFICATIONS

PHYSICAL	
Housing Dimensions	8.5 x 5.0 x 1.3 inches
Weight with Battery	16.0 Ounces
Tamper Activation	Cover Opening, Wall Removal
Mounting Screws	#4 or #6
ENVIRONMENTAL	
Operating Temperature	32 to 120°F (0 to 49°C)
Storage Temperature	-4 to 86°F (-20 to 30°C), Long-Term
Maximum Humidity	85% relative humidity, non-condensing
POWER	
<i>Power Transformer</i>	
Input	100-240VAC 50/60Hz 0.5A
Output	12VDC 1A
Part Number	RE012-6
<i>Battery</i>	
Backup	24 hours minimum
Specifications	6VDC 800mAh NiMH
Part Number	RE030
Trickle Charge	8mA
Fast Charge	32mA
WIRELESS RADIO	
RF Frequency	319.5MHz, 345MHz, 433.92MHz
Compatibility	Interlogix®, 2GIG® Honeywell®, DSC®, Qolsys®, Insynctive®
Sensors	Up to 128
CERTIFICATIONS	
<i>ETL Listings</i>	
RE524X	UL1023, ULC1023
RE524XC	UL1023, ULC1023, UL1610, ULC S304
Other	FCC, IC

## USE CASES

**Q:** I am remodeling a rambler and am worried about the Insynctive windows on the west end reporting to the hub. What can I do?

**A:** The repeater function of the Translator is specifically designed for this purpose. Place a translator midway in the home, and the Insynctive products will have a boost-repeater for their communications.

**Q:** I am installing new Insynctive products into a home with an existing security system. How can this product help me?

**A:** The Translator can both boost and repeat the Insynctive messages, as well as translate Insynctive sensors into the protocol of another panel. This reduces costs and disruption for a homeowner using both Insynctive sensors and any existing security system they may have.

**Q:** Would I ever need 2 Translators in a single install?

**A:** In a very large home you may need multiple repeaters and/or a repeater and translator functionality. Each Translator can provide either function, or perform both functions simultaneously.