



Getting It Right

How to Measure

To ensure proper performance, it is essential to get the correct measurements of the rough opening.

There are three critical measurements to obtain:

1. The width of the door frame opening
2. From the subfloor to the top of your door frame
3. The wall depth, also known as the jamb depth

For reference, a common size for a single exterior door is 6'8" H x 36" W x 4 9/16" D.

Measure the Existing Rough Opening

To ensure accurate measurements, the interior casing of the door must be removed. Once removed, you will reveal the rough opening.

- 1 Measure from the horizontal sides of the frame
Measurement 1 (Width)

- 2 Measure from the subfloor to the bottom of the header
Measurement 2 (Height)

- 3 Measure the width of the existing door jamb
Measurement 3 (Wall Depth/Jamb Extension)
 4-9/16" 5-1/4" 6-9/16"

Understanding Door Handing & Swing

If the door swings into the interior of the home, it is an inswing




If the door swings to the outside/exterior of the home, it is an outswing.

To determine handing of the door view door from the exterior.

Hinge on the left side of the door - Left-handed Door

Hinge on the right side of the door - Right-handed Door

Rough Opening Specifications

Door Configuration	Door Size	Rough Opening*
 Single Door	30"	32.25" x 82.125"
	32"	34.25" x 82.125"
	34"	36.25" x 82.125"
	36"	38.25" x 82.125"
 Single Door with 2 Sidelights	30" door; 12" sidelights	59.25" x 82.125"
	30" door; 14" sidelights	63.25" x 82.125"
	32" door; 12" sidelights	61.25" x 82.125"
	32" door; 14" sidelights	65.25" x 82.125"
	34" door; 12" sidelights	63.25" x 82.125"
	34" door; 14" sidelights	67.25" x 82.125"
 Double Door	60" x 2 30" doors	62.75" x 82.125"
	64" x 2 32" doors	66.75" x 82.125"
	68" x 2 34" doors	70.75" x 82.125"
	72" x 2 36" doors	74.75" x 82.125"

* Inswing Doors

* Door heights 6'8"


^^ Outswing doors has a 1/2" wider masonry opening

How To Order

- 1 Complete PSE Checklist
- 2 Order door through m2o
- 3 Order handleset through Genesis
- 4 Order installation through ISST

Understanding Jamb Depth Terms & Measuring

Single Entry Door Top View

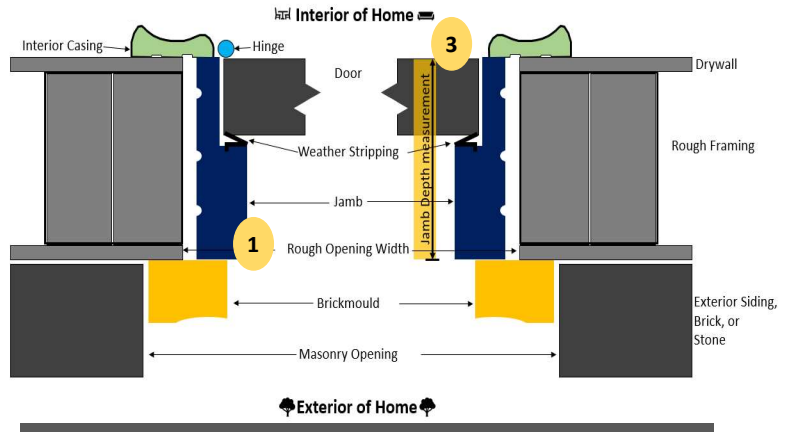

Understanding Height Measuring

Single Entry Door Side View

